Nanosystems and **Technologies** nanoplus


Distributed Feedback Lasers

1850 nm - 2200 nm


nanoplus Distributed Feedback Lasers (DFB) are specifically designed for high-precision gas detection using tunable diode laser absorption spectroscopy (TDLAS). Our devices operate reliably in more than 30,000 installations worldwide. For more than 20 years nanoplus has set the standard for DFB laser technology and is the only manufacturer routinely providing DFB lasers at any wavelength.

Key features:

- **MONOMODE**
- **CONTINUOUS WAVE**
- **ROOM TEMPERATURE**
- MODE HOP FREE TUNING

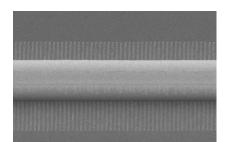

Overgrowth-free DFB device proces-

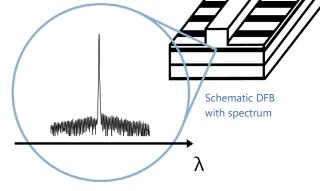

Any custom wavelength is possible: You tell us what you need and we deliver it. With our patented DFB technology we design any wavelength between 760 nm and 14 µm.

Our excellent spectral purity is characterized by a large side mode suppression ratio (SMSR) of > 35 dB, giving your system a low signal to noise ratio against crossinterference.

A narrow linewidth below 3 MHz guarantees ultra-precise scanning of the absorption line feature. The high output power of several mW yields a stronger signal and increases your measurement precision.

Fast and wide wavelength tuning is required for in situ systems. Most customers use a scan rate of 10 kHz and benefit from our very large tuning coefficient.

"Do not change your ideas, let us deliver a laser that fits your application."

fiber coupled

butterfly package

We offer various packaging options, e.g. several free space housings including TEC and NTC, fiber coupling, collimation and custom designs. What do you require?

If you require custom specifications, please contact us. Nearly 80 % of our devices are more or less customer-specific. As nanoplus is a fully vertically integrated company, we control the entire process chain from design to packaging. Both nanoplus production facilities are based in Germany. To quarantee consistent product quality we apply a strict and ISO certified quality management system at all levels.

Our sales and R&D teams have long-standing experience in developing lasers. They will advise you in your design and realization phase as well as after-sales: We make market leaders!



WAVELENGTH

760-830 nm

830-920 nm

920-1100 nm

1100-1300 nm

1300-1650 nm

1650-1850 nm

1850-2200 nm

2200-2600 nm

2600-2900 nm

2800-4000 nm

4000-4600 nm

4600-5300 nm

5300-5800 nm

5800-6500 nm

6000-14000 nm











Typical Specifications: 1850 nm - 2200 nm

This data sheet reports performance data of a sample nanoplus DFB laser at 1877 nm, which is representative for the entire wavelength range. We offer enhanced specifications for 1854 nm, 1877 nm and 2004.0 nm. Please refer to our TOP Wavelengths for further details: https://nanoplus.com/top-wavelengths.

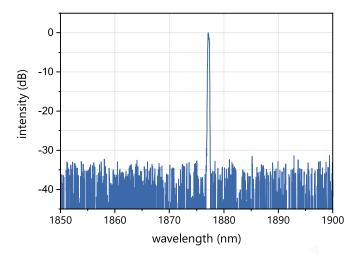

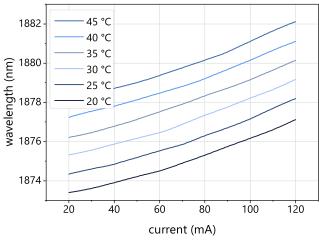

Typical room temperature cw spectrum of a nanoplus DFB laser at 1877 nm

Typical mode hop free tuning of a nanoplus DFB laser at 1877 nm by current and temperature

electro-optical characteristics	symbol	unit	min.	typ	max.
operating wavelength (at $T_{op'}$ I_{op})	$\boldsymbol{\lambda}_{op}$	nm		Please specify to 0.1 nm.	
optical output power (at $\lambda_{_{op}}$)	P_{op}	mW		3	
operating current	l _{op}	mA		100	
operating voltage	V_{op}	V		2	
threshold current	${\sf I}_{\sf th}$	mA	5	25	65
side mode suppression ratio	SMSR	dB		> 35	
current tuning coefficient	C_{I}	nm / mA	0.01	0.02	0.05
temperature tuning coefficient	C_{\scriptscriptstyleT}	nm / K	0.16	0.20	0.23
operating chip temperature	T_{op}	°C	+20	+25	+50
operating case temperature*	T_{c}	°C	-20	+25	+50
storage temperature*	T _s	°C	-40	+20	+80

laser packaging options

* non-condensing

TO5 with TEC and NTC, black cap, AR coated window

TO56 without TEC or NTC, sealed, window

c-mount without TEC or NTC

butterfly package with TEC and NTC, SM fiber, FC/APC connector; PM fiber up to 2050 nm chip on carrier without TEC, with NTC

Technical drawings & accessories are available at: https://nanoplus.com/packaging-options

Please contact sales@nanoplus.com for customized specifications, quotes and further questions. Visit our website for technical notes, application samples or literature referrals.